

DPJ Bean Polishers



DPJ-200B



DPJ-200C

1. Introduction

This equipment is used for clearing sundries, removing dust and polishing of red bean, mung bean, soybean and other beans, with good appearance, reasonable design, simple installation and easy operation. It has low power, can use three-phase or single-phase power supply. The machine has function of automatic dust collection, does not pollute environment. The machine can also be equipped a hoist to save labor.

It is widely applied to bean products factories, beans sales point of farmer's market. Through polishing, the beans are significantly improved quality, and promoted sale and sold at higher prices. Welcome customers to choose and purchase.

2. Technical Parameter

Model	Power(KW)	Output (t/h)	Remark
DPJ-200A	2.2~3	1~1.5	Easy
DPJ-200B	4~5.5	1.5~2.5	With dust collector
DPJ-200C	5.5 ~ 7.5	2.5 ~ 3	With dust collector and hoist

Equipment dimension: L1600 × W1000 × H1500 Packing size: 1600 × 1000 × 1100(DPJ-200B)

3. Operation & Use

The machine must be installed steadily, before use, start it three minutes under no-load, to check whether rotation direction is correct, whether its operation is normal. Put beans in it after determining the machine works normally. Add beans slowly from small flow till the machine works in normal. The materials should be removed before stop and shutdown of power supply.

4. Installation, Removal and Cloth Change of Roller

The roller of the machine is made up of wooden roller and cloth, output by spiral using adhesive belt. When the machine is used to a certain time, the bean polishing effect declines, the cloth roller should be changed. Methods are as follows: remove original cloth roller, remove all the old cloth, fold new cloth in 10 to 15 layer, cut it into cloth lists of 15 to 20 centimeters, according to the original rotation direction of adhesive belt, nail up the cloth layers with round nails. Do not mistake the spiral direction. The spacing of the cloth lists is in light with the original spacing, about 10 to 15 centimeters. Then it can be installed to use.

5. Use of Dust Collector

Start the machine and the collector runs. Generally, water tank is available to set the dust of the collector, the dust-collection bag is also available. Remove after use of a period of time. At the bottom of machine, it has a big clearing mouth, pull gate plate to remove big sundries. Full set of air supply also should be removed dust regularly to keep the smooth of air supply, otherwise it will affect the effects.

6. Contact Us Danyang Daliang Machinery Factory

Tel: 86-511-82393598, 13905294133 Fax: 86-511-86120028

Add: 153 East Yingbin Road Jiangshu Town, Danyang City, Jiangsu Province P.C.: 212364

E-mail: sales@dlmech.cn [Http://www.dlmech.cn](http://www.dlmech.cn)